

## POWER UP!


### Step 1: Power On The **ARCADE, MARQUEE (TOP), & ACCENT LIGHTS**

- Press the red button on the outlet switch. The switch lights up when on




### Step 2: Power On The **SCREEN & SOUND**

- Take the TCL Roku Remote - point it at the screen
- Press the red button at the top center of the remote to power on the screen & sound

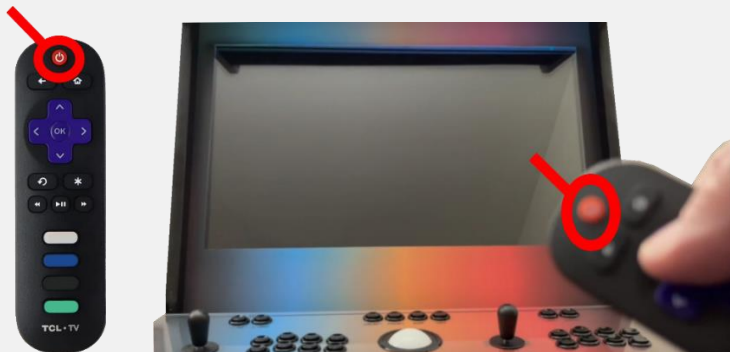

### Step 3: Adjust the **VOLUME**

- Take the TCL Roku remote - point it at the screen
- On the right-hand side of the remote...
  - Press the **top button** to **increase** the **volume**
  - Press the **middle button** to **decrease** the **volume**
  - Press the **bottom button** to **mute** or **unmute** the **volume**

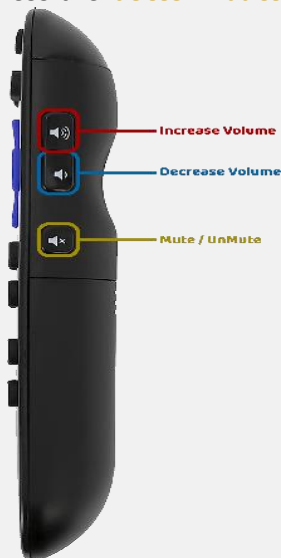

## PLAY A GAME

- Use the left-hand side **PLAYER 1 JOYSTICK**
- **NAVIGATE UP AND DOWN** to the game category / platform (e.g. Arcade Favorites)
- Press the **SELECT** button to pick the game category / platform
- Continue to use the **PLAYER 1 JOYSTICK** and **NAVIGATE TO YOUR GAME**
- Press **SELECT** to **START THE GAME**



## QUIT / EXIT A GAME

- Press the **EXIT** button to quit a game



## POWER OFF THE ARCADE

- Press the **EXIT** button until you see the screen below with **SHUTDOWN**
- **NAVIGATE** down to **SHUTDOWN**, and press **SELECT**



- **IMPORTANT:** Flip the red button on the outlet switch to **OFF**

